

# heating.

**amh** heat exchangers for temperatures from 30 °C – 95 °C

amcoss heat exchangers of the amh series replace old or expensive AMAT, Neslab and other OEM temperature control units. They are a powerful and cost-efficient alternative for the microchip production.



## amh-080

For the replacement of  
AMAT 0 and 1 Heat Exchangers  
Neslab Steelhead

**amh**  
080



## amh-090

For the replacement of  
Neslab Steelhead  
Neslab Endura  
TEL MB Square

**amh**  
090



## amh-090-S

Compatible with  
Mattson Helios III

**amh**  
090-S

PLUG  
& PLAY

## Superior product-highlights\_


- // **Plug & play:** there are various options of machine configuration and the equipment will be individually prepared meeting the customer's individual needs. It needs only to be connected and can be operated at once. This saves time and money.
- // **Low acquisition costs** due to an excellent cost-performance ratio.
- // **Low operating costs** thanks to an economic pump, heat insulated tanks and piping as well as deionization on demand (resistivity-based regulation).

## Additional product features\_

- // Adapted for water and water-glycol mixtures up to 95°C
- // Power supply either 400V/50Hz or 208V/50Hz
- // Various operation modes: local, CHX interface, DIO
- // Integrated protection against dry running and automatic filling level control
- // Three-step microprocessor controller with temperature control and automatic optimization
- // Resistivity sensor: controls the resistivity of the cooling medium and its deionization. Thus, resistivity of the medium remains stable and so does the whole process.
- // Various remote interfaces, e.g. AMAT 5000 analog, Digital IO, CHX, RS-485 etc., are supported - to be used on different machine configurations.
- // The balanced size of the heating rod surface makes the heating unit especially powerful and results in lower stress for heater and fluid making both more durable.
- // Various displays: system pressure, temperature (0,1°C accuracy), resistivity of process water, etc.
- // Optional frequency-controlled pump to maintain constant pressure at the tool



- // **Low maintenance costs** by applying only media pipings made in stainless steel and high-quality components that are easily accessible to be maintained by the customers' own service personnel. Placing of the high-quality stainless steel pump separately from the storage tank extends its lifetime noticeably.

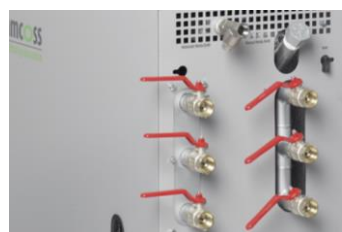

- // The number of connectors (in- and outlet), as well as the type of express connector (Parker, Swagelok etc.) for liquid media may be chosen.

# cooling.

**amh** chillers for temperatures from 0 °C – 40 °C and 5 °C – 60 °C

amcoss offers special, already qualified chillers which for example replace LAM as well as AMAT Centura chillers. They are mainly used for cooling and climatizing chambers and ozon generators but also for electrodes and electrostatic chucks. Our chillers are approved devices which amcoss adapts with proprietary controllers to your individual needs. You will receive a ready-to-use device.



**amh-012 / amh-024 / amh-024-ac**  
Temperature range: 5 – 60 °C  
(amh-012: 5 – 40 °C standard)  
For the replacement of LAM rainbow platform chillers  
- LAM TCU4080  
- LAM TCU2080 (dual loop)

**amh** **amh** **amh**  
012 024 024-ac



**amh-032**

Temperature range: 0 – 40 °C  
For the replacement of  
- LAM TCU4080

This is the model of your choice if a lower temperature range between 0° C and 40 °C is required.

**amh**  
032



**amh-030 / amh-030-ac**  
Temperature range: 5 – 60 °C  
For the replacement of  
- Beta Tech CU700  
- LAM TCU2080 (dual loop)

**amh** **amh**  
030 030-ac

// amh-024 and amh-030 are available in 2 versions: amh-024 /-030 (water cooled) and amh-024-ac / amh-030-ac (air cooled).



**amh-050 / amh-060**

Temperature range: 5 – 60 °C  
For the replacement of AMAT Centura chillers  
- Neslab HX150 (CHX)  
- Neslab HX300

**amh** **amh**  
050 060

// amh-024-R / -030-R: 2 chillers stacked in a specially designed rack to substitute a LAM dual loop chiller.

**amh** **amh**  
024-R 030-R

## Product specialties\_



// An optional tray for the placing of the external DI cartridge, mounted on the backside of the chiller is available.



// The standardized interface is being replaced by a proprietary controller which is connected to a control touch screen on the top cover of the chiller.

- selection of local or remote mode
- adjustment of actual & target temperature
- password entry
- selection of different parameters
- display of warning and alarm

An extra connector is being fixed at the housing.



// Special components, as for example conductivity measurement, are individually available. Fluid couplings can be chosen, e.g. stainless Parker express couplings with bypass or a magnetic valve.

amcoss GmbH  
Leusbundtweg 49a  
6800 Feldkirch  
Austria

phone +43 5522 209 50  
telefax +43 5522 209 50-9  
office@amcoss.com

www.amcossmaterials.com  
www.amcoss.com



## Advantages\_

Our customers will receive personalized devices adjusted to their own process requirements and do not have to find solutions on their own. There will be no arduous sourcing processes. amcoss devices are even more economic than OEM chillers. That all saves time and money.